



Comfort Factors

These factors affect how you feel. The **persona** represents the occupants and shows their expected clothing and activity level.

Set the clothing level on the slider below. Activity level is set by the building manager. Other factors are measured by sensors or inferred.

Current Comfort

Shows the estimated comfort level at this time. The peak of the curve means maximum comfort. **Arrows show when adjustments are in progress** to bring comfort back to the ideal level.

Comfort Adjustment

Indicate what you usually wear in this space so the system can automatically adjust.

To cool or warm the room, move the slider.

© 2023–25 PassiveLogic, Inc.